



WOOX

# Smart Outdoor Camera

Quick Start Guide (EN)

Verkorte handleiding (NL)

Kurzanleitung (DE)

Gu a de inicio r pido (ES)

Guide de d marrage rapide (FR)

Guida rapida (IT)

Guia de inicia o r pida (PT)

Hurtigstartsguide (DK)

Snabbstartsguide (SE) Pikaopas  
(FI)

Kr tki przewodnik (PL)

Rychl p ru ka (CZ)

 
 
Pr ru ka pre r chly tart (SK)

Gyors tmutat (HU)

Ghid rapid (RO)

## R9044



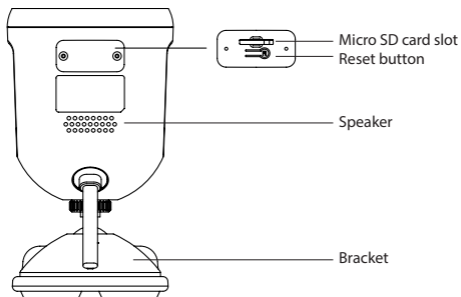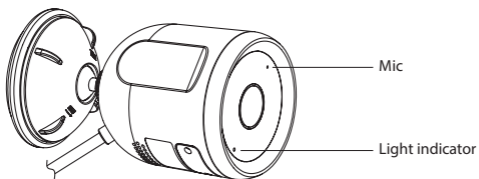

# **English**

## **Package includes:**

1. Smart Outdoor camera x 1
2. USB cable x 1
3. Cover kit for connector x 1
4. User manual x 1
5. Power Adatper x 1
6. screw bag x 1
7. Security sticker x 2

## **Specification**

Power: DC 5V/1A (power adapter is included)

Resolution: 1920x1080P

IR distance: up to 10 meters

Angle of View: 104°

Audio input: Built in Mic

Audio output: Built in speaker

Two-way talk: support

Motion detection: support

Micro SD card: Max. 128G (not included)

Network: 2.4GHz Wi-Fi and RJ45 10/100M

Waterproof: IP65

Working temperature: -20 °C - 50 °C

Working humidity: 10%-95%RH, no condensation

Dimension: 68x68x119mm

## **Introduction**

 
WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

## **Requirement to use:**


- 1.Woox home app
- 2.WLAN-enabled router: 2.4GHz (Separate band)

## **English** **Installation**


1. Rotate and open the base

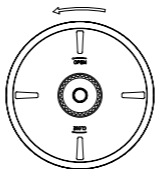

 2. Screw fixed to the wall.

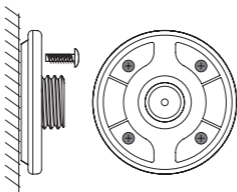

 3. Rotate and close the top cover of the base and install the device.

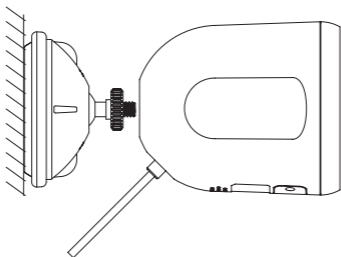

### **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.

2. Launch the app "WOOX Home".

3. Create a new account or log in to your existing account.

4. Tap "+" to add the device.

5. Select the applicable product type from the list of products.

6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.

7. Confirm the Wi-Fi network and password.

Note: only 2.4GHz WiFi is supported.

8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **English**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9.The app will now search for the device and register it to your account.

10.Enter the device name.

### **NOTE:**

1.The device name will also be used by Amazon Alexa and Google Home.

2.The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

### **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

### **Introductie**

WOOX Smart Outdoor Camera is een Full HD 1080P beveiligingscamera met functies zoals tweerichtingsaudio, bewegingsdetectie, nachtzicht, lokale en cloudopslag, IP65 waterdicht, werkt met Echo Show en Google Nest Hub, en meer.

#### **Vereiste om te gebruiken:**

 
- 1.Woox Home-app
- 2.WLAN-compatibele router: 2,4 GHz (aparte band)




## **Nederlands**

# **Installatie**


1. Draai en open de basis

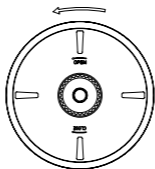

 2. Schroef vast aan de muur

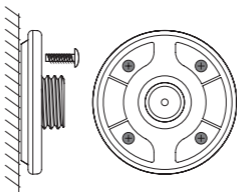

 3. Draai en sluit de bovenklep van de basis en installeer het apparaat.

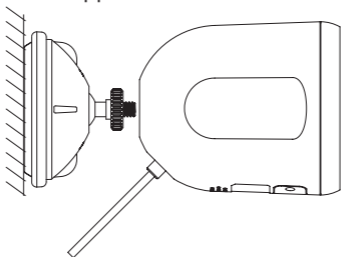

### **Stel de slimme buitencamera in met de WOOX Home app**

1. Download en installeer de app "WOOX Home" van de Apple App Store of Google Play Store op uw mobiele apparaat.
2. Start de app "WOOX Home".
3. Maak een nieuw account aan of log in op uw bestaande account.
4. Tik op "+" om het apparaat toe te voegen.
5. Selecteer het toepasselijke producttype uit de lijst met producten.
6. Zorg ervoor dat het indicatielampje snel knippert (knippert 2 keer per seconde). Als het indicatielampje niet knippert: houd de resetknop aan de onderkant van de camera ingedrukt totdat het indicatielampje begint te knippen.
7. Bevestig het Wi-Fi-netwerk en wachtwoord. Let op: alleen 2,4 GHz wifi wordt ondersteund.
8. De app zal u vragen om een QR-code te scannen die door de camera in de slimme buitencamera moet worden gelezen om het koppelen te starten. Druk op doorgaan op de app en er moet nu een QR-code worden gegenereerd om het product aan uw account te koppelen.

## ***Nederlands***

Plaats uw mobiele telefoon of tablet voor de cameralens en zorg ervoor dat de QR-code volledig in beeld is. Zodra u de geluidsmelding hoort, bevestigt u dit in de app, dan begint de laatste fase van het koppelen van de smart

outdoor camera toegevoegd aan uw account.

9. De app zoekt nu naar het apparaat en registreert het op uw account.

10. Voer de apparaatnaam in.

### **NOTITIE:**

1. de apparaatnaam wordt ook gebruikt door Amazon Alexa en Google Home.

2. het apparaat ondersteunt zowel Wi-Fi en Ethernet LAN-netwerk, bovenstaande instructies zijn voor Wi-Fi-verbinding. Als je een Ethernet LAN-verbinding wilt gebruiken, selecteer dan de "kabelmodus" in de rechterbovenhoek in de app bij stap 6.

### **Ondersteuning**

Als u meer hulp nodig heeft of opmerkingen of suggesties heeft, bezoek dan [www.wooxhome.com](http://www.wooxhome.com)

### **Einführung**

 
Die WOOX Smart Outdoor Camera ist eine Full HD 1080P-Überwachungskamera mit Funktionen wie Zwei-Wege-Audio, Bewegungserkennung, Nachtsicht, lokalem und Cloud-Speicher, IP65 wasserdicht, funktioniert mit Echo Show und Google Nest Hub und mehr.

### **Voraussetzung zur Verwendung:**


- 1.Woox Home App
- 2.WLAN-fähiger Router: 2,4 GHz (separates Band)

## Deutsch Installation


1. Drehen und  
öffnen Sie die  
Basis

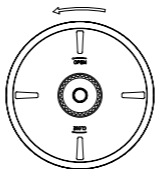

 2. An der Wand befestigte Schraube

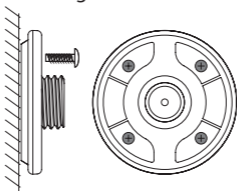

 3. Drehen und schließen Sie die obere  
Abdeckung der Basis und installieren Sie das  
Gerät

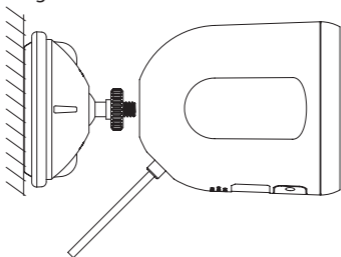

### **Richten Sie die Smart Outdoor-Kamera mit der WOOX Home-App ein**

1. Laden Sie die App "WOOX Home" aus dem Apple App Store oder Google Play Store auf Ihr Mobilgerät herunter und installieren Sie sie.

2. Starten Sie die App "WOOX Home".

3. Erstellen Sie ein neues Konto oder melden Sie sich bei Ihrem vorhandenen Konto an.

4. Tippen Sie auf „+“, um das Gerät hinzuzufügen.

5. Wählen Sie den entsprechenden Produkttyp aus der Produktliste aus.

6. Stellen Sie sicher, dass die Anzeigelampe schnell blinkt (blinkt zweimal pro Sekunde). Wenn die Anzeigelampe nicht blinkt: Halten Sie die Reset-Taste an der Unterseite der Kamera gedrückt, bis die Anzeigelampe zu blinken beginnt.

7. Bestätigen Sie das Wi-Fi-Netzwerk und das Passwort.

Hinweis: Es wird nur 2,4-GHz-WLAN unterstützt.

8. Die App fordert Sie auf, einen QR-Code zu scannen, der von der Kamera in der Smart-Outdoor-Kamera gelesen werden muss, um das Pairing zu starten. Drücken Sie in der App auf Weiter. Nun sollte ein QR-Code generiert werden, um das Produkt mit Ihrem Konto zu koppeln.

## **Deutsch**

Positionieren Sie Ihr Mobil- oder Tablet-Gerät vor dem Kameraobjektiv und stellen Sie sicher, dass der QR-Code vollständig angezeigt wird. Sobald Sie die Eingabeaufforderung in der App bestätigen, beginnt die letzte Phase des Pairing des Smart Außenkamera auf Ihr Konto.

9. Die App sucht nun nach dem Gerät und registriert es in Ihrem Konto.

10. Geben Sie den Gerätenamen ein.

### **HINWEIS:**

1. Der Geräte name wird auch von Amazon Alexa und Google Home verwendet.

2. Das Gerät unterstützt sowohl Wi-Fi- als auch Ethernet-LAN-Netzwerke. Die obigen Anweisungen gelten für die WiFi-Verbindung. Wenn Sie eine Ethernet-LAN-Verbindung verwenden möchten, wählen Sie in Schritt 6 in der App in der rechten oberen Ecke den "Kabelmodus" aus.

### **Unterstützung**

Wenn Sie weitere Hilfe benötigen oder Kommentare oder Vorschläge haben, besuchen Sie bitte [www.wooxhome.com](http://www.wooxhome.com)

### **Introducción**

WOOX Smart Outdoor Camera es una cámara de seguridad Full HD 1080P con características que incluyen audio bidireccional, detección de movimiento, visión nocturna, almacenamiento local y en la nube, IP65 a prueba de agua, funciona con Echo Show y Google Nest Hub, y más.

#### **Requisito para utilizar:**

 
1. Aplicación de hogar Wox
2. Enrutador habilitado para WLAN: 2.4GHz (banda separada)




## **Espanol**

# **Instalación**


1. Gire y abra la base

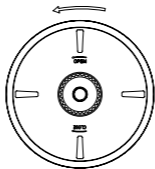

 2. Tornillo fijado a la pared

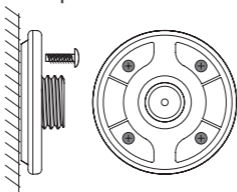

 3. Gire y cierre la cubierta superior de la base e instale el dispositivo.

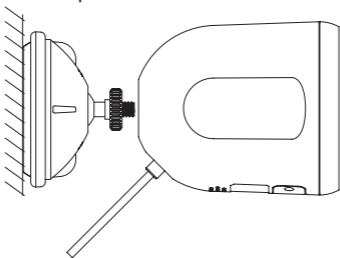

### **Configure la cámara exterior inteligente con la aplicación WOOX Home**

1. Descargue e instale la aplicación "WOOX Home" de Apple App Store o Google Play Store en su dispositivo móvil.
2. Inicie la aplicación "WOOX Home".
3. Cree una nueva cuenta o inicie sesión en su cuenta existente.
4. Toque "+" para agregar el dispositivo.
5. Seleccione el tipo de producto aplicable de la lista de productos.
6. Asegúrese de que la luz indicadora parpadee rápidamente (parpadee 2 veces por segundo). Si la luz indicadora no parpadea: mantén presionado y presiona el botón de reinicio en la parte inferior de la cámara hasta que la luz indicadora comience a parpadear.
7. Confirme la red Wi-Fi y la contraseña.

#### **Nota:**

solo se admite WiFi de 2,4 GHz.

8. La aplicación le pedirá que escanee un código QR que debe leer la cámara en la cámara exterior inteligente para iniciar el emparejamiento, presione continuar en la aplicación y ahora se debe generar un código QR para emparejar el producto con su cuenta.

## **Espanol**

Coloque su dispositivo móvil o tableta frente a la lente de la cámara y asegúrese de que el código QR esté en el marco de visión completo, una vez que escuche el mensaje de sonido, confirme esto en la aplicación, esto comenzará la etapa final de emparejamiento del dispositivo inteligente.

cámara exterior a su cuenta.

9. La aplicación buscará el dispositivo y lo registrará en su cuenta.

10. Ingrese el nombre del dispositivo.

### **NOTA:**

1.El nombre del dispositivo también será utilizado por Amazon Alexa y Google Home.

2.El dispositivo es compatible con redes LAN Wi-Fi y Ethernet, las instrucciones anteriores son para la conexión WiFi. Si desea utilizar la conexión Ethernet LAN, seleccione el "modo de cable" en la esquina superior derecha de la aplicación en el paso 6.

### **Apoyo**

Si necesita más ayuda o tiene comentarios o sugerencias, visite [www.wooxhome.com](http://www.wooxhome.com)

## **introduction**

La caméra extérieure intelligente WOOX est une caméra de sécurité Full HD 1080P dotée de fonctionnalités telles que l'audio bidirectionnel, la détection de mouvement, la vision nocturne, le stockage local et cloud, IP65 étanche, fonctionne avec Echo Show et Google Nest Hub, et plus encore.

### **Condition d'utilisation:**

1. Application pour la maison Woon
2. routeur compatible WLAN: 2,4 GHz (bande séparée)





## français

Placez votre appareil mobile ou tablette devant l'objectif de la caméra et assurez-vous que le code QR est en plein cran, une fois que vous entendez l'invite sonore confirmez cela sur l'application, cela commencera la dernière étape de couplage de la smart

caméra extérieure votre compte.

L'application va maintenant rechercher l'appareil et l'enregistrer sur votre compte.

10. Entrez le nom de l'appareil.

### REMARQUE:

Le nom de l'appareil doit être en français et ne pas contenir de caractères spéciaux, de chiffres ou de tirets. Le nom de l'appareil doit être unique. Le nom de l'appareil doit être compris entre 3 et 30 caractères. Le nom de l'appareil doit être en minuscules.

### Soutien

Si vous avez besoin d'aide, contactez notre service client. Vous pouvez également trouver des tutoriels et des guides d'utilisation sur notre site web.

### **Introduction**

WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

### **Requirement to use**

 
1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)




## **Italiano**

### **Installation**


1. Rotate and open the base

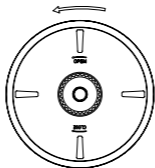

 2. Screw fixed to the wall

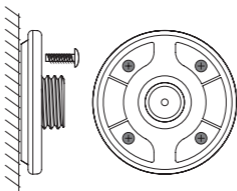

 3. Rotate and close the top cover of the base and install the device.

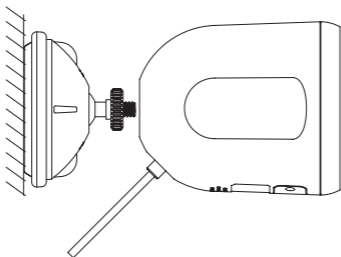

## **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **Italiano**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

### **Introduction**

WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

 
### **Requirement to use**

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)


## **Português**

### **Installation**


1. Rotate and open the base

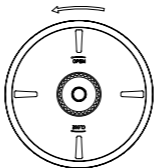

 2. Screw fixed to the wall

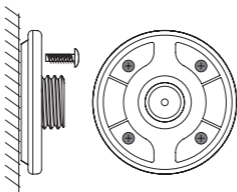

 3. Rotate and close the top cover of the base and install the device.

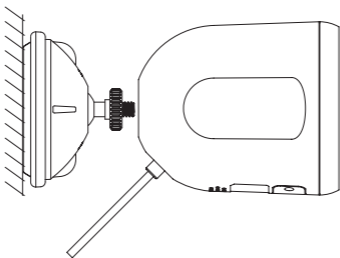

### **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **Português**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

### **Introduction**

WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

 
### **Requirement to use**

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)




## **Dansk** **Installation**


1. Rotate and open the base

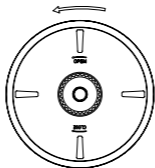

 2. Screw fixed to the wall

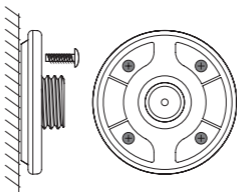

 3. Rotate and close the top cover of the base and install the device.

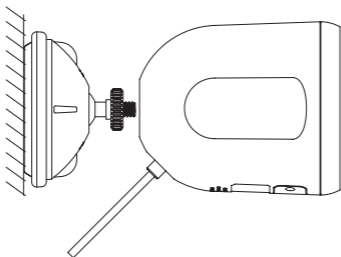

## **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **Dansk**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

### **Introduction**

 
WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

### **Requirement to use**


1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)

## **Svenska** **Installation**


1. Rotate and open the base

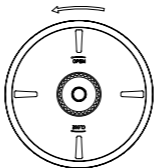

 2. Screw fixed to the wall

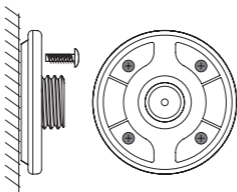

 3. Rotate and close the top cover of the base and install the device.

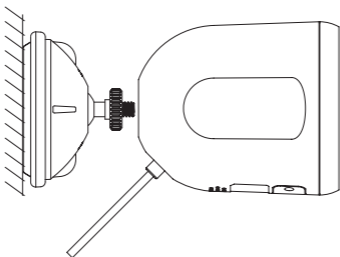

## **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **Svenska**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

### **Introduction**

WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

 
### **Requirement to use**

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)




## ***Suomi*** **Installation**


1. Rotate and open the base

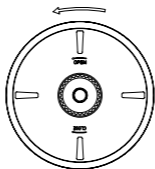

 2. Screw fixed to the wall

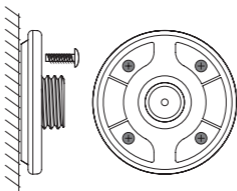

 3. Rotate and close the top cover of the base and install the device.

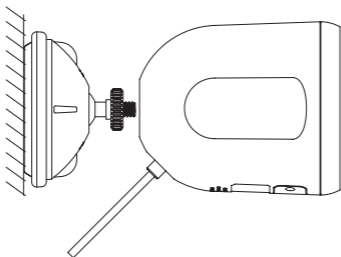

## **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **Suomi**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

## **Introduction**

 
WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

## **Requirement to use**


1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)

## ***Polski*** **Installation**


1. Rotate and open the base

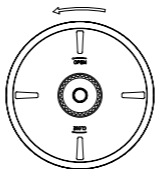

 2. Screw fixed to the wall

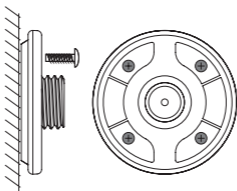

 3. Rotate and close the top cover of the base and install the device.

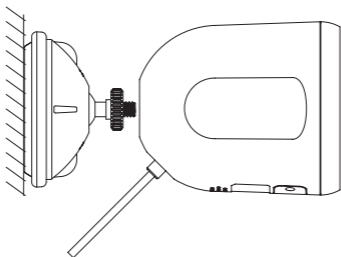

## **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## ***Polski***

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

## Introduction

WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

 
## Requirement to use

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)




## Česky Installation


1. Rotate and open the base

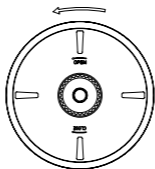

 2. Screw fixed to the wall

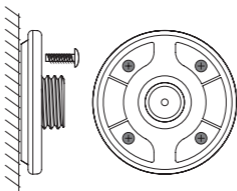

 3. Rotate and close the top cover of the base and install the device.

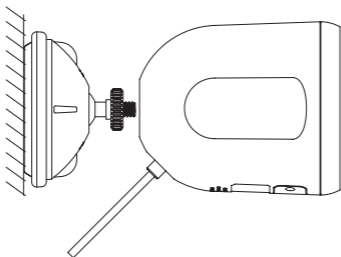

## Set up the smart outdoor camera with the WOOX Home app

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## Česky

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

## **Introduction**

 
WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

## **Requirement to use**


1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)

## *slovenský* Installation


1. Rotate and open the base

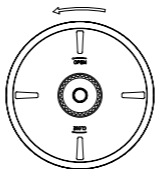

 2. Screw fixed to the wall

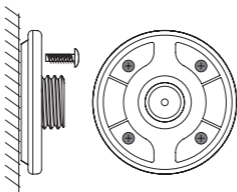

 3. Rotate and close the top cover of the base and install the device.

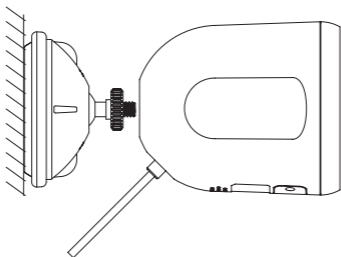

## **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **slovenský**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

## **Introduction**

WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

 
## **Requirement to use**

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)




## *magyar* Installation


1. Rotate and open the base

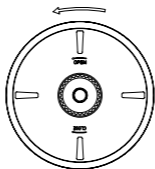

 2. Screw fixed to the wall

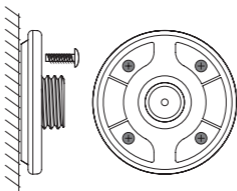

 3. Rotate and close the top cover of the base and install the device.

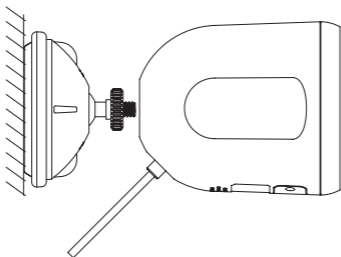

## **Set up the smart outdoor camera with the WOOX Home app**

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## ***magyar***

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

### **Introduction**

WOOX Smart Outdoor Camera is a Full HD 1080P security camera with features including two-way audio, motion detection, night vision, local and cloud storage, , IP65 waterproof, works with Echo Show and Google Nest Hub, and more.

 
### **Requirement to use**

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate band)


## **Română**

# **Installation**


1. Rotate and open the base

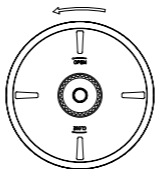

 2. Screw fixed to the wall

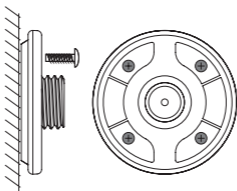

 3. Rotate and close the top cover of the base and install the device.

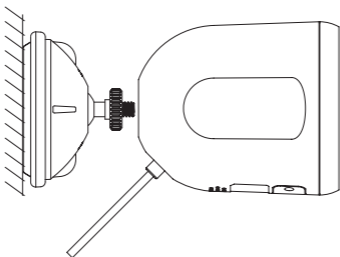

## **Română** Set up the smart outdoor camera with the WOOX Home app

1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
2. Launch the app "WOOX Home".
3. Create a new account or log in to your existing account.
4. Tap "+" to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: hold and press the reset button on the bottom of camera until the indicator light starts to flash.
7. Confirm the Wi-Fi network and password.  
Note: only 2.4GHz WiFi is supported.
8. The App will prompt you to scan a QR code that needs to be read by the camera in the smart outdoor camera to initiate pairing, press continue on the App and a QR code should now be generated to pair the product to your account.

## **Română**

Position your mobile or tablet device in front of the camera lens and ensure the QR code is in full frame of view, once you hear the sound prompt confirm this on the App, this will commence the final stage of pairing the smart

outdoor camera to your account.

9. The app will now search for the device and register it to your account.

10. Enter the device name.

### **NOTE:**

1. The device name will also be used by Amazon Alexa and Google Home.

2. The device supports both Wi-Fi and Ethernet LAN network, above instructions are for WiFi connection. If you wish to use Ethernet LAN connection, please select the "cable mode" in the right top corner in app at step 6.

## **Support**

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)